

Reliable Parts

FALL KICKOFF SALE



Electrolux

Prices in effect until October 24, 2025



EPTWFU01 - Electrolux PureSource Ultra II Water and Ice Refrigerator Filter	\$45.41
ULTRAUF - Electrolux Refrigerator PureSource Ultra Water Filter	\$45.13
5304518661 - Electrolux Oven Range Control Board	\$59.88
5303918277 - Electrolux Refrigerator Ice Maker Assembly	\$48.78
5304535768 - Electrolux Dishwasher Grey Lower Rack Assembly	\$59.37
IM116000 - Electrolux Refrigerator Ice Maker	\$79.30
137566001 - Electrolux Washer Bellows Assembly	\$90.30
5304529766 - Electrolux Dryer Lint Filter Assembly	\$41.98
5304509493 - Electrolux Range Electronic Clock Control, ES300	\$71.86
5303935059 - Electrolux Range Universal 1/2 Flat Igniter Shield	\$40.87
242193204 - Electrolux Refrigerator Door Gasket	\$66.54
5304508761 - Electrolux Refrigerator Crisper Drawer Cover	\$46.86
5304457724 - Electrolux Dryer Preventive Maintenance Kit	\$56.32
5303918774 - Electrolux Refrigerator Fan Motor Kit Condenser	\$71.89
240364793 - Electrolux Refrigerator Crisper Pan Cover	\$41.94
5304491941 - Electrolux Refrigerator Starter Relay and Plug Kit	\$53.26
5304531885 - Electrolux Refrigerator Main Control Board	\$172.06
242219204 - Electrolux Refrigerator Evaporator Fan Motor	\$64.40
903136-9010 - Electrolux Stove Surface Burner Infinite Switch	\$43.10
137240800 - Electrolux Washer Drain Pump	\$76.76
5304509470 - Electrolux Microwave Magnetron	\$211.62
A00130341 - Electrolux Dishwasher Dispenser Assembly	\$43.54
137524000 - Electrolux Washer Dryer Igniter	\$66.19
240563639 - Electrolux Refrigerator Dispenser Module	\$100.30
5304528825 - Electrolux Wall Oven Motor Fan Assembly	\$65.26
241969607 - Electrolux Refrigerator Meat Pan	\$77.35
5304503232 - Electrolux Range Oven Door Inner Glass	\$46.48
A15601102 - Electrolux Refrigerator PurePour Water Filter Bypass	\$42.79
5304517981 - Electrolux Dishwasher Lower Wash Arm	\$41.70
5304518023 - Electrolux Range PCB Board	\$109.15
5304406099 - Electrolux Washer/Dryer Safety Thermostat	\$47.92
137311900 - Electrolux Washer Drain Pump	\$89.60
5304509983 - Electrolux Range Oven Control Board, Clock, ES300	\$66.37
5304514769 - Electrolux Washer Circulation Pump Assembly	\$85.05
241600906 - Electrolux Refrigerator Damper Control Assembly	\$43.59
5304505529 - Electrolux Refrigerator Freezer Door Gasket	\$88.58
5304523182 - Electrolux Washer Board Assembly, User Interface	\$93.25
5304511363 - Electrolux Washer Drain Pump	\$107.87
5304514108 - Electrolux Range Oven Electronic Controller	\$100.35
3203459 - Electrolux Oven Range Dual Gas Safety Valve	\$114.85
5304529910 - Electrolux Dryer Board Assembly	\$141.74
5304534451 - Electrolux Dryer Lint Filter Kit	\$51.19
117512430 - Electrolux Dishwasher Control Panel	\$146.90
5303918884 - Electrolux Refrigerator Compressor Kit with Electricals	\$92.68
5304534450 - Electrolux Dryer Lint Screen and Duct Filter Kit	\$56.11
5304536861 - Electrolux Dryer Heater Asmy, Two Element	\$48.09
316203301 - Electrolux Range Oven Broil Element	\$81.14
242074223 - Electrolux Refrigerator Dispenser Module	\$101.42
5304508924 - Electrolux Range Control Board	\$148.70
5303207409 - Electrolux Dryer Gas Primary Valve	\$172.42



FALL KICKOFF SALE

Prices in effect until October 24, 2025




297370602 - Electrolux Freezer Electrical Control Board	\$96.92
5304511971 - Electrolux Washer/Dryer Control Assembly Electrical	\$118.06
5304507201 - Electrolux Refrigerator Freezer Door Gasket, Seal - White	\$70.12
5304516117 - Electrolux Range Board-Control	\$125.53
5304520582 - Electrolux Dishwasher Control Board	\$81.43
132518842 - Electrolux Washer Valve Assembly	\$49.54
240563638 - Electrolux Refrigerator Black Dispenser Module	\$100.29
318255103 - Electrolux Oven Bake Element 2300W	\$77.19
5304500456 - Electrolux Washer Power Control Board W/Housing	\$85.65
5304517318 - Electrolux Washer/Dryer Transmission with O-Ring	\$123.88
5304529531 - Electrolux Refrigerator Valve	\$72.69
5304528575 - Electrolux Refrigerator Display PCB	\$163.73
242193219 - Electrolux Refrigerator Gray Magnetic Door Gasket	\$74.75
5304521513 - Electrolux Dryer Board Assembly	\$96.35
5303937189 - Electrolux Drive Motor with Blower Housing	\$124.76
5304519654 - Electrolux Refrigerator Cover Assembly	\$49.78
240350620 - Electrolux Refrigerator Glass Shelf	\$61.97
134743500 - Electrolux Washer Control Board	\$125.82
316215900 - Electrolux Range Primary Thermostat	\$90.10
316560118 - Electrolux Range Electronic Control Board	\$164.47
5304517657 - Electrolux Dishwasher Control Panel	\$111.83
5304527932 - Electrolux Refrigerator Black User Interface Assembly	\$141.35
A18493801 - Electrolux Oven PC Board Assembly	\$140.93
5304511361 - Electrolux Washer Retractor	\$56.68
318902502 - Electrolux Range Hidden Bake Element (1450W)	\$81.57
5304523299 - Electrolux Range Control Assembly	\$141.93
137465101 - Electrolux Washer Water Inlet Valve	\$47.90
139013700 - Electrolux Range Bake Ignitor	\$68.18
316580400 - Electrolux Range Harness	\$73.28
5304508854 - Electrolux Refrigerator Crisper Drawer	\$78.68
5304523139 - Electrolux Refrigerator Freezer Door Gasket	\$69.76
242036303 - Electrolux Refrigerator Flipper Mullion Assembly, Grey	\$83.40
5304526193 - Electrolux Range Electronic Control, Black ES5	\$152.70
5304509581 - Electrolux Microwave Handle	\$65.22
5304514107 - Electrolux Range Control Board	\$107.60
316238202 - Electrolux Range Dual Infinite Switch	\$47.86
316630001 - Electrolux Range Controller	\$174.03
240396002 - Electrolux Refrigerator Primary Base Water Filter	\$51.00
5304526795 - Electrolux Refrigerator PC Board	\$115.06
316443601 - Electrolux Range Oven Door Handle, White	\$51.55
316455461 - Electrolux Wall Oven Electronic Clock Timer	\$138.29
316505500 - Electrolux Range Element	\$98.05
5304530853 - Electrolux Refrigerator Assembly Mullion	\$50.01
FF03DISPD1 - Electrolux 1/3HP Direct Wire Disposer	\$62.03
242120501 - Electrolux Refrigerator Crisper Pan Cover	\$56.75
134211400 - Electrolux Washer Water Inlet Valve, 115V	\$40.30
5304523779 - Electrolux Refrigerator Inverter	\$102.83
240351207 - Electrolux Refrigerator Crisper Pan Drawer Lower	\$69.07
5304509478 - Electrolux Microwave Capacitor	\$59.95
297326500 - Electrolux Refrigerator Electronic Control Board	\$156.71
134792700 - Electrolux Dryer Heating Element	\$54.07
242252702 - Electrolux Refrigerator Water Inlet Valve	\$29.09
5303918344 - Electrolux Refrigerator Kit Ice Maker	\$62.65
316436001 - Electrolux Oven Range Infinite Burner Switch	\$13.38



FALL KICKOFF SALE

Prices in effect until October 24, 2025

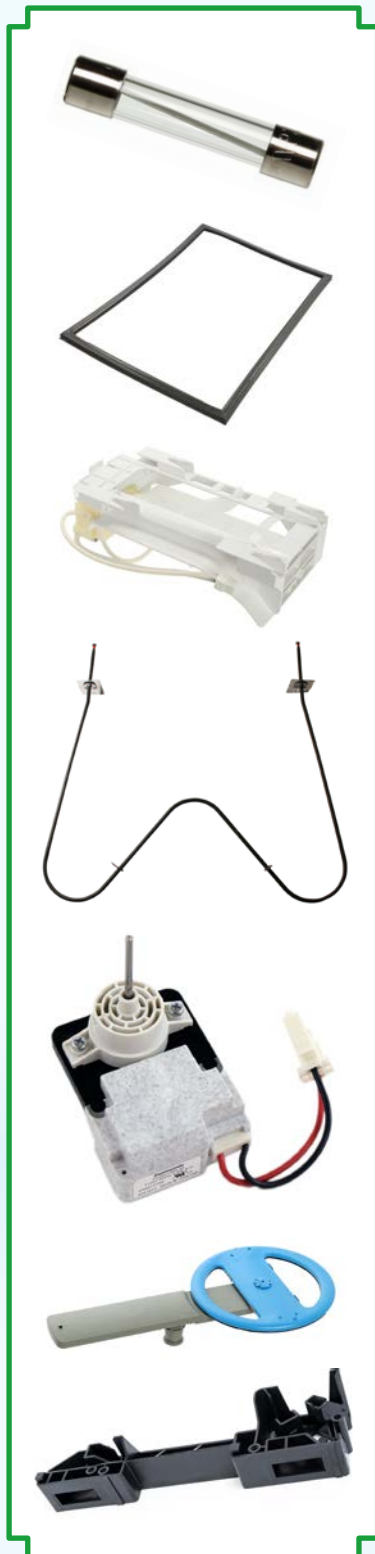

5304509451 - Electrolux Microwave Fuse	\$5.82
241872512 - Electrolux Refrigerator Door Gasket Black	\$44.58
243297613 - Electrolux Refrigerator Ice Maker	\$50.99
154701001 - Electrolux Dishwasher Service Kit Splash Shield	\$10.28
5303051519 - Electrolux Oven 2600W Bake Element	\$8.69
242077705 - Electrolux Refrigerator Fan Motor	\$49.89
5304507158 - Electrolux Dishwasher Lower Wash Arm Assembly	\$26.05
5304509457 - Electrolux Microwave Latch Hook Assembly	\$16.01
154827601 - Electrolux Dishwasher Tub Gasket	\$11.19
5304515738 - Electrolux Washer Drain Hose	\$26.38
5303281153 - Electrolux Dryer Rear Drum Bearing Kit	\$8.30
5303918493 - Electrolux Refrigerator Ice Maker Assembly	\$95.22
218428101 - Electrolux Refrigerator White Door Handle	\$14.47
316220805 - Electrolux Oven Overlay	\$33.18
131553900 - Electrolux Heater Element Assembly	\$70.47
241816602 - Electrolux Refrigerator Auger Motor	\$73.75
297286803 - Electrolux Refrigerator Run Capacitor	\$14.15
316135401 - Electrolux Oven 9" Radiant Surface Element Cooktop	\$57.25
134515300 - Electrolux Washer Bellows Kit without Light Hole	\$143.17
218730603 - Electrolux Refrigerator Door Gasket	\$24.41
316455430 - Electrolux Range Timer Clock	\$123.79
242252603 - Electrolux Refrigerator Water Inlet Valve	\$27.78
131476300 - Electrolux Dryer Blower Wheel	\$16.84
5304519335 - Electrolux Microwave Magnetron	\$108.52
154580301 - Electrolux Dishwasher Drain Pump Assembly	\$23.87
5304516871 - Electrolux Dryer Lint Filter, White	\$14.68
241860803 - Electrolux Refrigerator Ice Container Bucket Assembly	\$58.45
131475320 - Electrolux Dryer Heating Element	\$48.81
154430501 - Electrolux Dishwasher Door Spring	\$14.41
5304518660 - Electrolux Range Clock	\$60.46
240359001 - Electrolux Refrigerator White Door Shelf Bin	\$23.62
154637401 - Electrolux Dishwasher Fill Valve Water	\$12.73
240350702 - Electrolux Refrigerator Upper Crisper Drawer Cover	\$27.82
131863007 - Electrolux Dryer Idler Pulley Assembly	\$23.66
5303283286 - Electrolux Drum Felt Seal Lower Front	\$14.66
3204267 - Electrolux Dryer Safety Thermostat	\$30.50
240535201 - Electrolux Refrigerator Door Rack	\$18.25
134889600 - Electrolux Washer Drain Hose, 98"	\$25.73
241872501 - Electrolux Refrigerator Freezer Door Gasket	\$51.43
316555800 - Electrolux Oven Dual Radiant Element	\$75.87
241872502 - Electrolux Refrigerator Fresh Food Door Gasket	\$58.57
240350608 - Electrolux Refrigerator Crisper Glass Insert	\$26.59
241872503 - Electrolux Refrigerator Door Gasket (Single Seal)	\$53.61
5303937182 - Electrolux Dryer Upper Drum Felt Seal with Adhesive	\$7.86
240534701 - Electrolux Refrigerator Door Rack	\$15.50
137032600 - Electrolux Washer Dryer Thermal Limiter	\$10.50
134762010 - Electrolux Washer Switch	\$24.93
318191023 - Electrolux Oven Switch	\$34.30
240351061 - Electrolux Refrigerator Crisper Pan	\$40.15
154325201 - Electrolux Dishwasher Door Spring Linkage	\$14.41
5304509231 - Electrolux Range Clock	\$112.72
154859201 - Electrolux Dishwasher Pump and Motor Assembly	\$93.08
240342830 - Electrolux Refrigerator Meat Pan	\$37.14

Pricing of promotional flyer products may vary depending on demand, supply, and supplier constraints. Best efforts have been made to ensure all information is accurate. Prices are subject to change without notice. Transportation expenses may apply. All taxes are extra. We reserve the right to limit quantities.