

Reliable Parts

FALL SALE



BOSCH

Prices in effect until December 17, 2025



12042920 - Bosch Refrigerator Control Board	\$145.76
00423093 - Bosch Range Gas Valve	\$85.67
12029207 - Bosch Range Control Display Module	\$123.15
00652184 - Bosch Dryer Fluff Filter	\$22.00
00157311 - Bosch Appliance Halogen Lamp	\$22.00
12018676 - Bosch Range Gas Burner Kit	\$85.07
00425788 - Bosch Range Door Hinge	\$48.18
00627235 - Bosch Cooktop Switch	\$17.84
00612817 - Bosch Range / Cooktop Ignition Device	\$27.95
00647583 - Bosch Refrigerator Control Unit	\$297.49
20007273 - Bosch Washer Boot Gasket	\$46.99
10011040 - Bosch Refrigerator Water Valve	\$20.81
12004873 - Bosch Range Spark Module	\$81.50
12033661 - Bosch Refrigerator Display Panel	\$74.36
00631621 - Bosch Cooktop Knob-Cooking Area	\$23.19
00418885 - Bosch Range Ignition Device	\$27.95
11020741 - Bosch Range Control Module Programmed	\$166.59
11025496 - Bosch Refrigerator / Freezer Fan Motor	\$172.54
00667489 - Bosch Washer Door Boot Gasket	\$49.97
10005470 - Bosch Dishwasher Control Module Part	\$26.17
00798555 - Bosch Refrigerator Ice Maker	\$108.87
12025140 - Bosch Dishwasher Door Opening Module	\$35.69
12028528 - Bosch Dishwasher Programmed Power Control Module	\$141.60
00665887 - Bosch Dishwasher Panel Facia - Control Panel	\$100.54
00640565 - Bosch Refrigerator Premium Ice & Water Filter	\$49.97
00263096 - Bosch Dishwasher Door Seal Gasket	\$46.40
00411253 - Bosch Range Gas Valve Solenoid	\$123.75
11007194 - Bosch Range Vent Hood Fan Motor	\$297.49
10007424 - Bosch Range Light Assembly	\$80.91
00752078 - Bosch Dishwasher Sump	\$24.98
00635221 - Bosch Range Top Burner Spark Electrode	\$29.74
00791462 - Bosch Gas Range Blower Motor	\$83.29
20000247 - Bosch Refrigerator Door Seal	\$47.59
00189321 - Bosch Range / Cooktop Venturi Tube	\$19.03
00486767 - Bosch Range, Wall Oven, Microwave Door Seal	\$47.59
00665888 - Bosch Dishwasher Facia Panel, Black	\$76.74
12028526 - Bosch Dishwasher Control Module	\$98.16
11020742 - Bosch Range Control Module	\$148.74
12034882 - Bosch Oven Control Module	\$77.93
00354135 - Bosch Washer Door Boot Gasket	\$53.54
00478812 - Bosch Dishwasher Control Panel	\$49.97
12046043 - Bosch Washer / Dryer Control Module	\$248.70
00189968 - Bosch Stove Range Oven Cooktop Up / Down Switch w/ Terminals	\$73.17
12016882 - Bosch Dishwasher Power Module Program	\$141.60
00746432 - Bosch Dishwasher Control Unit	\$52.94
10016657 - Bosch Dishwasher Wheel	\$20.22
00667487 - Bosch Washer Door Boot Gasket	\$49.97
00631507 - Bosch Microwave Turntable Motor	\$22.00
11031131 - Bosch Dishwasher Programmed Operating Module	\$86.26
00425301 - Bosch Dishwasher Programmed Operating Module	\$49.97



BOSCH

FALL SALE

Prices in effect until December 17, 2025



00666640 - Bosch Range Fan	\$96.97
00480317 - Bosch Dishwasher Instantaneous Water Heater	\$173.13
00671179 - Bosch Refrigerator Tray/Door Shelf Bin	\$38.07
00651285 - Bosch Range Oven Door Latch	\$65.44
00677134 - Bosch Dryer Cover Panel	\$44.02
12034880 - Bosch Wall Oven Control Module	\$102.92
12016885 - Bosch Dishwasher Power Module Program	\$141.60
00422200 - Bosch Dryer Front Drum Support Roller Wheel	\$21.41
00626726 - Bosch Range Hood Power Module	\$265.95
00759374 - Bosch Oven Blower Fan	\$63.65
00144648 - Bosch Wall Oven Heater Element	\$55.92
00154740 - Bosch Washer Carbon-Brush	\$39.26
00368815 - Bosch Range Hood Grease Filter	\$37.47
00422272 - Bosch Dryer High Limit Thermostat	\$42.23
11048053 - Bosch UltraClarity Water Filter 3 Pack	\$90.39
23002415 - Bosch Refrigerator Heating Element	\$124.34
11012308 - Bosch Dishwasher Controller Unit	\$45.21
00650847 - Bosch Cooktop Knob-Cooking Area	\$24.98
12029339 - Bosch Refrigerator Control Module	\$245.13
00491647 - Bosch Dryer Door Hinge	\$19.03
12028532 - Bosch Dishwasher Power Module Program	\$98.16
00624610 - Bosch Range Potentiometer	\$62.46
00478811 - Bosch Dishwasher Panel Facia - Control Panel	\$84.48
00753864 - Bosch Refrigerator OEM PC Board	\$53.54
12028878 - Bosch Oven Display Control Board	\$158.85
00605694 - Bosch Washer Carbon Motor Brush	\$27.95
00637940 - Bosch Range / Cooktop Rubber Foot	\$29.74
00487073 - Bosch Range Hood Filter	\$31.52
00369009 - Bosch Oven Grease Filter	\$61.27
00704287 - Bosch Washer Silver & White Window Door Assembly	\$225.49
12026640 - Bosch Freezer Fan Motor	\$71.39
00755060 - Bosch Range Oven Meat Probe Sensor	\$55.92
11020740 - Bosch Oven Control Module	\$175.51
00367649 - Bosch Wall Oven Bake Element	\$45.21
00702534 - Bosch User Interface Control Board	\$311.77
12009532 - Bosch Dishwasher Programmed Control Board	\$141.60
00475225 - Bosch Dishwasher Facia Panel, Stainless Steel	\$95.19
00778926 - Bosch Dishwasher Control Panel	\$42.23
10010119 - Bosch Dryer NTC Sensor Repair Set	\$18.43
10013697 - Bosch Refrigerator Flap/Damper	\$59.49
12034239 - Bosch Range Temperature Gauge Display	\$140.41
00415504 - Bosch Range / Cooktop Ignition Device	\$101.14
00676967 - Bosch Dishwasher Control Unit	\$161.23
12028566 - Bosch Dishwasher Power Module Program	\$141.60
00676960 - Bosch Dishwasher Control Unit	\$138.62
12029425 - Bosch Oven Programmed Control Module	\$181.46
00263088 - Bosch Dishwasher Detergent Dispenser Assembly	\$122.56
12028339 - Bosch Refrigerator PC Board Assembly-MA	\$43.42
00486768 - Bosch Oven Door Gasket Seal	\$47.59

Pricing of promotional flyer products may vary depending on demand, supply, and supplier constraints. Best efforts have been made to ensure all information is accurate. Prices are subject to change without notice. Transportation expenses may apply. All taxes are extra. We reserve the right to limit quantities.